


CORIOLISS

MANUAL DE LIMPIEZA TYPHOON


- **1º PASO:** **Apaga el secador** y quita los accesorios (boquilla o difusor). Retira el filtro de admisión de aire girándolo en el sentido contrario de las agujas del reloj. Y después retira el filtro de anillo. Limpia el polvo utilizando un cepillito (1).

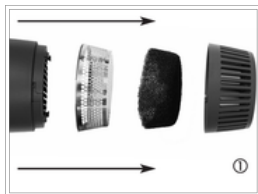

- **2º PASO:** Para activar la función de **auto-limpieza**, ajusta la posición del botón a standby, como en la imagen (2).



- **3º PASO:** Enchufa el aparato y mantén apretados los botones del ventilador y temperatura a la vez durante **3 segundos**. La función de auto-limpieza terminará después de 10 segundos y el motor se desconectará automáticamente.

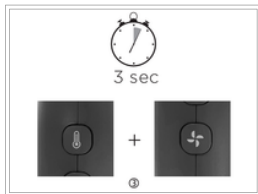

- **RECOMENDACIONES:**


Uso profesional: Limpieza diaria.

Uso particular: Limpieza cada 10 días.

CORIOLISS

CLEANING MANUAL - TYPHOON


- **1st STEP:** **Unplug the hair dryer** and remove any accessories (nozzle or diffuser). Remove the air-intake filter by turning it counter-clockwise, then remove the filter ring (1). Remove dust and dirt using a brush.

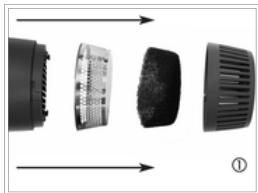

- **2nd STEP:** To activate the self-cleaning function, switch the hair dryer to the standby position (2).



- **3rd STEP:** Plug the device in and press and hold the temperature and fan speed button at the same time for **3 seconds** (3). The self-cleaning will end after 10 seconds and the motor will switch off automatically.

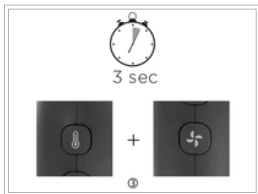

- **RECOMMENDATIONS:**
Professional use: Daily cleaning.
Personal use: Cleaning every 10 days.