

CORIOLISS

MANUAL DE LIMPIEZA MULTISTYLER


• LIMPIEZA MANUAL

1. Retire el accesorio manteniendo hacia abajo el botón de bloqueo (1). Si es necesario, ayúdese metiendo la uña por la ranura que lo separa del cuerpo del secador. Esta ranura no es un desperfecto.
2. Limpie el producto con un paño húmedo. Observe que no quede ninguna partícula.
3. Limpie y revise que en las aberturas no haya polvo ni suciedad.
4. Seque el producto y los accesorios. Asegúrese de que los accesorios están completamente secos antes de colocar uno en el producto.



• LIMPIEZA AUTOMÁTICA

1. Quite los accesorios del producto.
2. Conecte el enchufe, pulse el interruptor de encendido hasta la posición (I) y pulse al mismo tiempo el botón de temperatura (2) y, tras 3 segundos, entrará en modo de limpieza automática.
3. Una vez comenzado este modo, el artículo absorberá el aire por el cabezal y lo expulsará por la rejilla (3).
4. Cuando el producto deje de expulsar el aire absorbido, esto indica que el modo de limpieza automática ha finalizado.
5. Al cabo de unos segundos, el producto vuelve al flujo de aire con normalidad. Ya está listo para seguir con su uso.

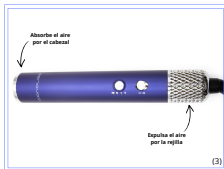

• RECOMENDACIONES:

Uso profesional: Limpieza diaria.

Uso particular: Limpieza cada 10 días.

CORIOLISS

CLEANING MANUAL - MULTISTYLER



- **MANUAL CLEANING**

1. Remove the attachment by holding down the locking button. If necessary, use your fingernail to pry it open in the groove separating it from the dryer body. This groove is not a defect.
2. Clean the product with a damp cloth. Make sure no particles remain.
3. Dry the product and accessories. Make sure the accessories are completely dry before attaching one to the product.



- **AUTOMATIC CLEANING**

1. Remove the product accessories.
2. Connect the plug, press the power switch to position (I) and at the same time press the temperature button and after 3 seconds it will enter automatic cleaning mode.
3. Once this mode has started, the item will absorb air through the head and expel it through the grille (3).
4. When the product stops expelling the absorbed air, this indicates that the automatic cleaning mode has ended.
5. After a few seconds, the product returns to normal airflow. It is now ready for continued use.

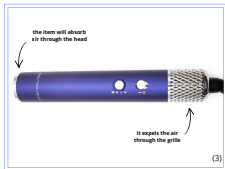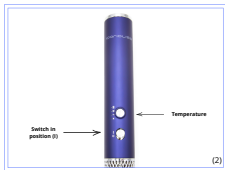

- **RECOMENDATIONS:**

Professional use: Daily cleaning.

Private use: Clean every 10 days.